


C-CUT


PROFESSIONAL CERAMIC TILE CUTTER

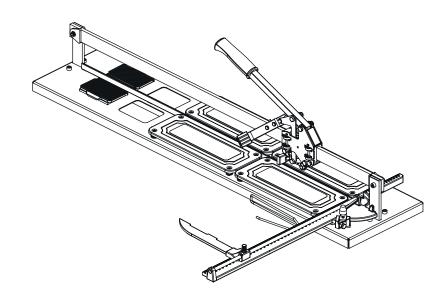






90°

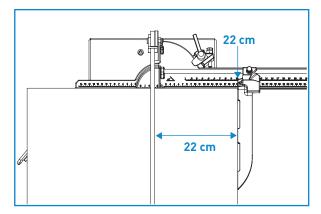


90° ADJUSTMENT: Adjust the ruler to 0° position by means of turning around its axis and fix it. Adjust the dimension you want to cut by means of the sliding angle on the ruler and read the dimension from the bottom scala.

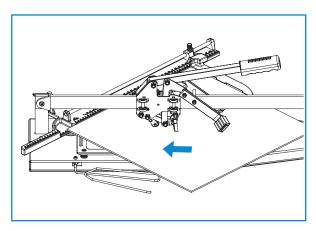


CUTTING: Score the cutting wheel once on ceramic tile, by means of sliding arm.

45°

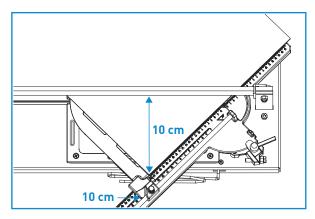

45° ADJUSTMENT: Adjust the ruler to 45° position by means of turning around its axis and fix it. Adjust the dimension you want to cut by means of the sliding angle on the ruler and read the dimension from the upper scala.

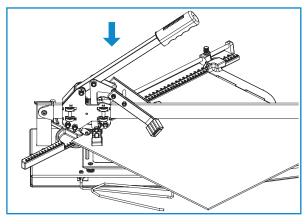

BREAKING: Press the sliding arm downwards slightly.